



Cross-Band Repeat with the Yaesu FTM-300DR

Can the Yaesu FTM-300DR do Cross-Band Repeat?
I can't find it in the manuals!

YES, the FTM-300DR will do Cross-Band Repeat.

You will need to setup the two bands (VFO's) A and B for the frequencies you want to use. Set one VFO for VHF and the other VFO for UHF. If you are configuring one of the VFO's to access a local repeater make sure you have included all the settings necessary to access the repeater.

When your bands are set turn the radio off and with the radio off press and hold down the "GM", "DISP" and "F" buttons while turning on the radio.



If the radio is in cross band repeat mode you should see "X-REPEATER" displayed at the bottom of the start screen under YAESU and your call sign.

When the transceiver is displaying the two VFO's you should see "X-RPT" in the upper right corner of the display. **At this point the transceiver is in cross-band repeat mode and no other keys will function.**

To return the radio to normal operation turn the radio off and with the radio off hold down the "GM", "DISP" and "F" buttons while turning the radio on and that will take the radio out of cross band repeat mode.