


## Anyone D878UV Plus Display Indicators

25 July 2019 as of Firmware version 1.13a

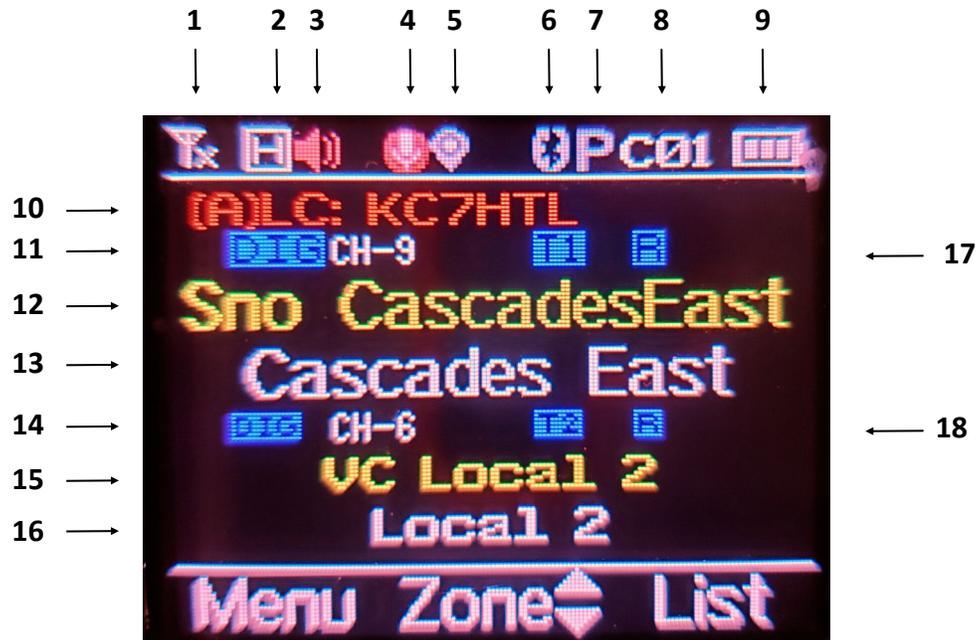

1	Antenna icon : Received Signal Strength (1 to 4 bars, x = no signal)
2	Transmit Power Level: L = Low, M = Medium, H = High, T = Turbo
3	Speaker icon: Digital Monitor (displayed = on for 1 or both Time Slots, not displayed = off)
4	Microphone icon: Audio Record (displayed = on for up to 3 hrs, not displayed = off)
5	GPS Location icon: grey = no GPS signal, red = GPS is receiving location; not displayed = off
6	Bluetooth icon: grey = BT on, not connected; blue = on & connected; not displayed = off
7	P icon: Bluetooth PTT button (grey = not connected, blue = connected)
8	Color Code: DMR color code number that is in use
9	Battery icon: remaining battery level (1 to 3 bars, none = battery empty)
10	Last Call: displays last user callsign or DMR ID received, and on which A or B channel
11	Channel number position in current Zone for A, and whether Digital (DIG) or Analog (ANA)
12	Current Talk Group (TG) selected for A
13	Current Zone selected for A
14	Channel number position in current Zone for B, and whether Digital (DIG) or Analog (ANA)
15	Current Talk Group (TG) selected for B
16	Current Zone selected for B
17	Time Slot in use for A (T1 = 1, T2 = 2); "R" = Repeater, no "R" displayed = simplex, red "R" = Tx & Rx frequencies reversed from normal
18	Time Slot in use for B (T1 = 1, T2 = 2); "R" = Repeater, no "R" displayed = simplex, red "R" = Tx & Rx frequencies reversed from normal